

Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bitte beachten Sie auch bei den Wandmontageelementen die max. Belastungswerte. Die Wandbeschaffenheit ist idealerweise bei Auftragsbefragung zu erfragen und spätestens vor der Montage unbedingt von fachkundigem Personal zu prüfen. Bei abweichender Beschaffenheit (z. B. Leichtbauwänden) ist eine andere, der Belastung angemessene Befestigung bauseits vorzunehmen. Klären Sie elektrische Vorleistungen für Anschluss- und Gerätetechnik. Frei hängende Beleuchtungen erfordern Kabelkanallösungen auf oder unter Putz.

Abb.: Beispiel 1239



**Befestigungsmaterial**

Holzdübel 8 x 40 mm



Schraube 3,5 x 30 mm



Schraube 4 x 80 mm




Oberteil Möbelgleiter




Unterteil Möbelgleiter



**1.** StellfüÙe / Möbelgleiter mit dem Zapfen in den Sockelboden setzen, Oberteile der Möbelgleiter auf die Unterteile drehen.

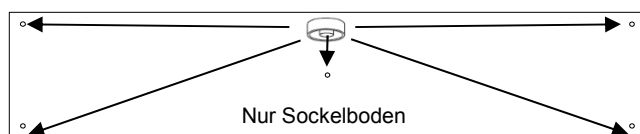


**2.** Dübel 8 x 40 in die Löcher für Sockelboden und Blatt drücken

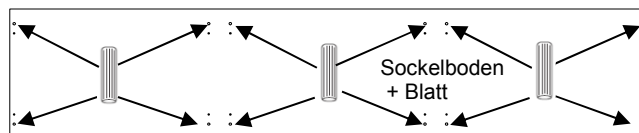


**3. Zusatzartikel Beleuchtung:** => siehe Anschluss Beleuchtungsplan

**4.** Soweit für Montage erforderlich. Frontteile ausbauen. Die einzelnen Korpen mit den Verbindungsleisten zusammen in die Dübel auf den Sockelboden stellen. Danach das Blatt auf den gesamten Korpus legen.

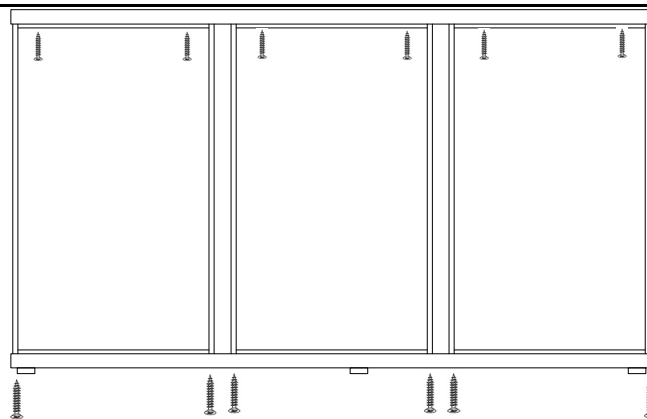


**5.** Deckblatt von innen mit Schraube 3,5 x 30 mm an den Korpus schrauben. Für den Sockelboden Schraube 4 x 80 mm verwenden. Von unten den Sockelboden verschrauben!

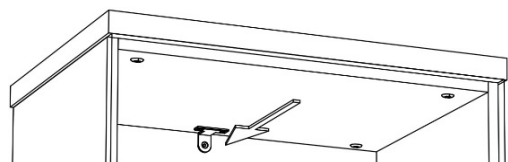

Lowboard ohne Kippsicherung!

**entweder 6A - oder 6B**

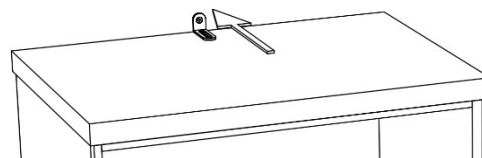

**6A.** Kippsicherung innen, **Möbelhöhe ca. 80 - 199 cm**  
 Mit kleinem Bohrer durch vormontierten Winkel und Rückwand bohren (Bohrposition an Mauerwerk markieren). Ø 8 mm Bohrung in Mauerwerk bohren. Dübel 8 x 40mm verankern. Mit Spanplattenschraube 5 x 80 mm befestigen.

**6B.** Kippsicherung außen, **nur bei Möbelhöhe ca. 216 cm!**  
 Set "Wandbestigung" verwenden. Anbringung oben auf dem Deckblatt.

**7** Griffe mit Griffschrauben M4 x25 mm anbringen.  
 Fronten einsetzen, Zierkappen auf Türscharniere klipsen!

# Assembly Cabinet with feet

next level<sup>3000</sup>

VENJAKOB

Vorsprung durch Design und Qualität

Service Hotline: Tel. +49 (0) 5209 592 0


Internet: www.venjakob-moebel.de (additional assembly instructions)

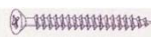
The fixture materials provided with this product (dowels and screws) are only suitable for fixing parts to concrete and/or solid masonry. Please observe the maximum load that the wall-mounted elements can carry. Ideally, the suitability of the wall should be enquired about when the order is made and must be checked by specialist staff before the cabinet is assembled at the latest. If the condition of the wall is not suitable (e.g. if it is a lightweight partition wall), then another type of fixture suitable for the load that is to be carried should be used. Check the electrical input of any connection or device technology. Free-hanging light fixtures require cable duct solutions that are either on or under plaster.

Fig.: Example Z411L





### Fixture materials

Wooden dowel 8 x 40 mm 

Screw 3.5 x 30 mm 


Screw 4 x 60 mm 

Upper part furniture glider 


Lower part furniture glider 



**1.** Place the adjustable feet / furniture gliders with the dowels in the base, twist the upper part of the furniture gliders into the lower part.

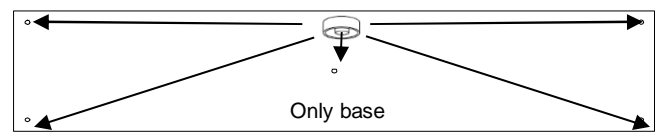


**2.** Insert the 8 x 40 dowels into the holes for the base and the overlay




**3. Additional item lighting:** => see lighting wiring diagram

**4.** If necessary for assembly: remove front parts. Place the individual carcasses along with the connecting trim in the dowels on the base. Afterwards place the overlay on the carcass.

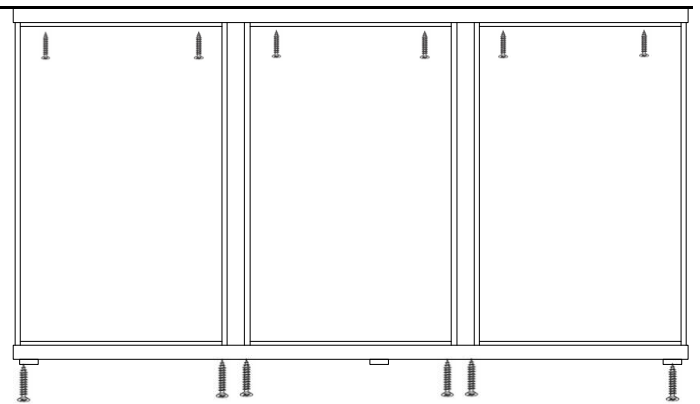


**5.** Screw the overlay onto the carcass from the inside with 3.5 x 30 mm screws. Use 4 x 80 mm screws for the base. Screw the base into place from below!

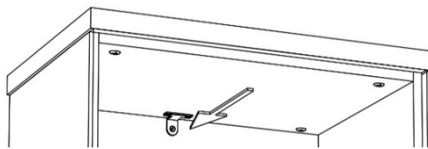

Low sideboard with no anti-tip protection!

**Either 6A - or 6B**

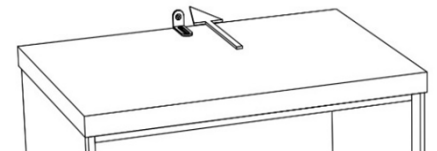

**6A.** Inner anti-tip protection, furniture height approx. 80-199 cm

Drill through pre-assembled bracket and back panel with small drill bit (mark the drilling position on the masonry). Drill Ø 8 mm holes in the masonry. Anchor the 8 x 40 mm dowels. Fasten into place with 5 x 80 mm chipboard screws.

**6B.** Outer anti-tip protection, only with furniture height approx. 216 cm!

Use "Wall fastening" set. Affix to the top of the overlay.

**7.** Attach the handles with M4 x 25 mm handle screws.

Reattach the fronts, clip the decorative caps onto the door hinges!